

Disclaimer: Installing an aftermarket radio in your Acura TL will result in the loss of the center dash speaker, factory hands free link and the factory aux port. The subwoofer and all door speakers will continue to work. The steering wheel controls that work with the aftermarket radio are volume up, volume down, next track, previous track and mode. The call buttons will not work with the aftermarket radio. Additional parts may be necessary to keep your factory steering wheel controls depending on the radio you are installing.

Notice: When replacing the radio in your Acura TL there are three connectors that will need to be wired to make your aftermarket radio work. The white connector and any additional connectors not mentioned behind the radio are not used when installing an aftermarket radio. To complete the installation you must color match the wires to the wires on your aftermarket radio.

Gray 24 Pin Connector A

PIN	COLOR	FUNCTION
A5	Gray/Black	Steering Wheel Control Ground
A12	Black	Ground
A13	Orange	Illumination
A14	Red	Switched 12V+
A16	Gray	Steering Wheel Control Output
A17	Blue/White	Factory Amplifier Turn on Input 12V+
A18	Black (RCA)	FR- RCA
A19	Red (RCA)	FR+ RCA
A22	Black (RCA)	FL- RCA
A23	White (RCA)	FL+ RCA
A24	Yellow	Constant 12V+

Gray 14 Pin Connector B

Pin	Color	Function
B1	Black (RCA)	Subwoofer - RCA
B2	Red (RCA)	Center Speaker - RCA
B3	Black(RCA)	Center Speaker + RCA
B4	Black(RCA)	RL - RCA
B5	Black (RCA)	RR - RCA
B8	White (RCA)	Subwoofer + RCA
B11	Red (RCA)	RL + RCA
B12	White (RCA)	RR + RCA
B13	White/Black	DPL Switch

Gray 2 Pin Connector D

Pin	Color	Function
D2	Black	Antenna Signal AM/FM
D3	Blue	Antenna Power Input 12V+

Pioneer/Kenwood/Sony/Alpine: Most Pioneer, Kenwood, and Sony radios only have one blue/white wire. This **blue/white wire must be connected** to the blue wires on the connectors provided in our wiring otherwise you will have no sound. If you can't access the menu or features after your install make sure to ground your parking break or install a parking bypass. If you are having trouble please call or text 877-542-2872. Almost all radios do not have a center channel output, this means the center channel RCA will not be connected, just tape it and leave it disconnected.