


**Notice:** The following instructions will help you wire together our DIY kit with your aftermarket radio and steering wheel control adapter. We will refer to the **blue plug as connector A** and the **grey plugs as connector C26 & C40**. On Acura's from **2004 to 2006** you will find connector **A & C26**. On Acura's from **2007 to 2008** you will find connector **A, C40 & D(antenna connector)**. *There is also a white plug on all Acura's that is not used when installing and aftermarket radio it is for the factory XM unit.*

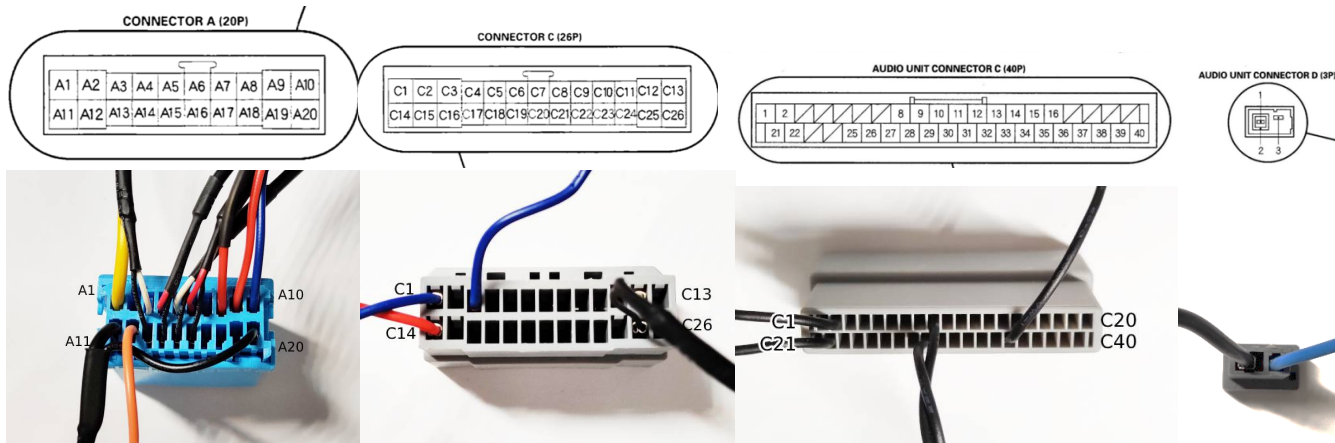

Pin	Color	Function
<b>A1</b>	Yellow	Constant 12V
<b>A3</b>	White(RCA)	Front Left + RCA
<b>A4</b>	Red(RCA)	Front Right + RCA
<b>A5</b>	White(RCA)	Rear Left + RCA
<b>A6</b>	Red(RCA)	Rear Right + RCA
<b>A8</b>	Red/Black	Steering Wheel Control +
<b>A9</b>	Red	Switched 12V
<b>A10</b>	Blue	FM Power Antenna (04-06)
<b>A11</b>	Black	Ground
<b>A12</b>	Orange	Illumination
<b>A13</b>	Black(RCA)	Front Left - RCA
<b>A14</b>	Black(RCA)	Front Right - RCA
<b>A15</b>	Black(RCA)	Rear Left - RCA
<b>A16</b>	Black(RCA)	Rear Right - RCA
<b>A20</b>	Black	Steering Wheel Control -

Pin C26	Color	Function
<b>C1</b>	Blue	GA-NET + (CANBUS)
<b>C3</b>	Blue	Factory Amp Turn On
<b>C13</b>	White(RCA)	Sub + RCA
<b>C14</b>	Red	GA-NET - (CANBUS)
<b>C25</b>	Black(RCA)	Sub - RCA

Pin C40	Color	Function
<b>C2</b>	Black	Sub + RCA
<b>C9</b>	Black	GA-NET + (CANBUS)
<b>C22</b>	Black	Sub - RCA
<b>C29</b>	Red	GA-NET - (CANBUS)
<b>C35</b>	Black(RCA)	Factory Amp Turn On

Pin D	Color	Function
<b>D2</b>	Black	Antenna Signal FM/AM
<b>D3</b>	Blue	Power Antenna (FM/AM)

**The 2007 to 2008 Acura TLs do not have pin A10 instead the power antenna 12V signal must be connected to pin D3.**

**Pioneer** radios only provide **one blue wire for amp turn on and power antenna** connect both blue wires D3 and C3/C35 to that blue/white wire to have full functionality. **Kenwood's and Alpines** offer an amp turn on wire along with a power antenna wire be sure to match each wire to the correct one.

The **steering wheel control interface** needs to be connected to **pin A8 Steering wheel control positive**, with our harness pin A20 is already connected to ground. If you have any questions or are stuck please call us at 631-538-0068 or email us at [info@mobilemaxcaraudio.com](mailto:info@mobilemaxcaraudio.com). Thank you for your business and congratulations on the new radio!